




# Installation manual

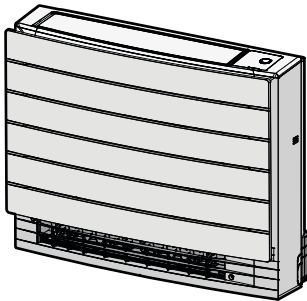

## Split system air conditioners



**CVXM20B2V1B**  
**FVXM25B2V1B**  
**FVXM35B2V1B**  
**FVXM50B2V1B**  
**FVXTM30B2V1B**

Installation manual  
Split system air conditioners

English

## Table of Contents

<b>1</b>	<b>About the documentation</b>	<b>2</b>
1.1	About this document.....	2
<b>2</b>	<b>Specific installer safety instructions</b>	<b>2</b>
<b>3</b>	<b>About the box</b>	<b>4</b>
3.1	Indoor unit.....	4
3.1.1	To remove the accessories from the indoor unit.....	4
<b>4</b>	<b>About the unit</b>	<b>4</b>
4.1	About the wireless LAN.....	4
4.1.1	Precautions when using the wireless LAN.....	4
4.1.2	Basic parameters.....	4
<b>5</b>	<b>Unit installation</b>	<b>4</b>
5.1	Preparing the installation site.....	5
5.1.1	Installation site requirements of the indoor unit.....	5
5.2	Mounting the indoor unit.....	6
5.2.1	To install the indoor unit.....	6
5.2.2	To drill a wall hole.....	8
5.2.3	To remove the slit portions.....	8
5.3	Connecting the drain piping.....	9
5.3.1	General guidelines.....	9
5.3.2	To connect the drain piping to the indoor unit.....	9
5.3.3	To check for water leaks.....	9
<b>6</b>	<b>Piping installation</b>	<b>10</b>
6.1	Preparing refrigerant piping.....	10
6.1.1	Refrigerant piping requirements.....	10
6.1.2	Refrigerant piping insulation.....	10
6.2	Connecting the refrigerant piping.....	10
6.2.1	To connect the refrigerant piping to the indoor unit.....	10
<b>7</b>	<b>Electrical installation</b>	<b>11</b>
7.1	Specifications of standard wiring components.....	11
7.2	To connect the electrical wiring to the indoor unit.....	11
7.3	To connect optional accessories (wired user interface, central user interface, wireless adapter, etc.).....	11
<b>8</b>	<b>Finishing the indoor unit installation</b>	<b>12</b>
8.1	To finish the indoor unit installation.....	12
<b>9</b>	<b>Configuration</b>	<b>12</b>
<b>10</b>	<b>Commissioning</b>	<b>12</b>
10.1	To perform a test run.....	12
10.1.1	To perform a test run using the wireless remote control.....	12
<b>11</b>	<b>Disposal</b>	<b>12</b>
<b>12</b>	<b>Technical data</b>	<b>12</b>
12.1	Wiring diagram.....	12
12.1.1	Unified wiring diagram legend.....	12

## 1 About the documentation

### 1.1 About this document



#### WARNING

Make sure installation, servicing, maintenance, repair and applied materials follow the instructions from Daikin (including all documents listed in “Documentation set”) and, in addition, comply with applicable legislation and are performed by qualified persons only. In Europe and areas where IEC standards apply, EN/IEC 60335-2-40 is the applicable standard.



#### INFORMATION

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

#### Target audience

Authorised installers



#### INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

#### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you **MUST** read before installing
  - Format: Paper (in the box of the indoor unit)
- **Indoor unit installation manual:**
  - Installation instructions
  - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
  - Preparation of the installation, good practices, reference data,...
  - Format: Digital files on <https://www.daikin.eu>. Use the search function to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

Scan the QR code below to find the full documentation set and more information about your product on the Daikin website.



The original instructions are written in English. All other languages are translations of the original instructions.

#### Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

## 2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

### INFORMATION

- Units CVXM-B, FVXM-B contains refrigerant leakage sensor, special requirement for unit with refrigerant leakage sensor applies.
- Unit FVXTM-B is WITHOUT the refrigerant leakage sensor, use graph for minimum floor area in the General safety precautions.

Unit installation (see "[5 Unit installation](#)" ▶ 4)

### WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

### WARNING

The appliance shall be stored as follows:

- in such a way as to prevent mechanical damage.
- in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).
- For CVXM, FVXM in a room with dimensions as specified in "[To determine the minimum floor area](#)" ▶ 5).
- For FVXTM-B in a room with dimensions as specified in "To determine the minimum floor area" in General safety precaution.

### WARNING

If appliances contain R32 refrigerant, then the floor area of the room in which the appliances are installed, operated and stored must be larger than the minimum floor area A (m<sup>2</sup>), for units CVXM, FVXM refer to the "[To determine the minimum floor area](#)" ▶ 5], for FVXTM-B refer to General safety precautions.

### CAUTION

For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.

### WARNING

Keep any required ventilation openings clear of obstructions.

Piping installation (see "[6 Piping installation](#)" ▶ 10)

### WARNING

- Take precautions to avoid excessive vibration or pulsation to refrigeration piping.
- Protect the protection devices, piping and fittings as much as possible against adverse environmental effects.
- Provide space for expansion and contraction of long runs of piping.
- Design and install piping in refrigerating systems such as to minimise the likelihood of hydraulic shock damaging the system.
- Mount the indoor equipment and pipes securely and protect them to avoid accidental rupture of equipment or pipes in case of events such as moving furniture or reconstruction activities.

### CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.

### DANGER: RISK OF BURNING/SCALDING

### CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

Electrical installation (see "[7 Electrical installation](#)" ▶ 11)

### DANGER: RISK OF ELECTROCUTION

### WARNING

ALWAYS use multicore cable for power supply cables.

### WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.

### WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, extension cords, or connections from a star system. They can cause overheating, electrical shocks or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.

### WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.

### WARNING

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### WARNING

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.

## 3 About the box

### WARNING

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.

### WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

### CAUTION


When replacing the R32 refrigerant leakage sensor, replace it with the sensor specified by the manufacturer (refer to the spare parts list).

## 3 About the box

### 3.1 Indoor unit

#### 3.1.1 To remove the accessories from the indoor unit

- Remove the accessories located at the bottom of the package. Spare SSID sticker is located on the unit.

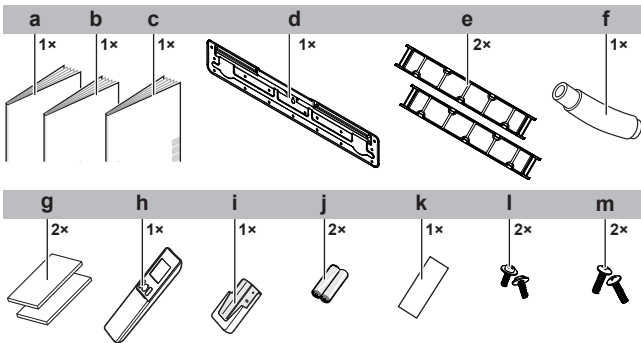

- a Installation manual
- b Operation manual
- c General safety precautions
- d Mounting plate
- e Titanium apatite deodorising filter
- f Drain hose
- g Insulation piece
- h Wireless remote control (user interface)
- i Wireless remote control
- j Dry battery AAA.LR03 (alkaline) for wireless remote control
- k Spare SSID sticker (attached to the unit)
- l Screws for fixing drain hose
- m White head screws (for final installation of the front grille)

- Spare SSID sticker.** Do NOT throw away the spare sticker. Keep it in a safe place in case it is needed in the future (e.g. in case the front grille is replaced, attach it to the new front grille).

## 4 About the unit

### WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.

### 4.1 About the wireless LAN

For detailed specifications, installation instructions, setting methods, FAQ, declaration of conformity and the latest version of this manual, visit [app.daikineurope.com](http://app.daikineurope.com).



#### INFORMATION: Declaration of conformity

- Daikin Industries Czech Republic s.r.o. declares that the radio equipment type inside of this unit is in compliance with Directive 2014/53/EU.
- This unit is considered as combined equipment according to the definition of Directive 2014/53/EU.

#### 4.1.1 Precautions when using the wireless LAN

Do NOT use near:

- Medical equipment.** E.g. persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- Auto-control equipment.** E.g. automatic doors or fire alarm equipment. This product may cause faulty behaviour of the equipment.
- Microwave oven.** It may affect wireless LAN communications.

#### 4.1.2 Basic parameters

What	Value
Frequency range	2400 MHz~2483.5 MHz
Radio protocol	IEEE 802.11b/g/n
Radio frequency channel	13ch
Output power	13 dBm
Effective radiated power	15 dBm (11b) / 14 dBm (11g) / 14 dBm (11n)
Power supply	DC 14 V / 100 mA

## 5 Unit installation



#### INFORMATION

If you are not sure how to open or close parts of the unit (front panel, electrical wiring box, front grille...) refer to the installer reference guide of the unit for opening and closing procedures. For location of the installer reference guide see "[1.1 About this document](#)" [p. 2].



#### WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

## 5.1 Preparing the installation site



### WARNING

The appliance shall be stored as follows:

- in such a way as to prevent mechanical damage.
- in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater).
- For CVXM, FVXM in a room with dimensions as specified in "To determine the minimum floor area" [▶ 5].
- For FVXTM-B in a room with dimensions as specified in "To determine the minimum floor area" in General safety precaution.

### 5.1.1 Installation site requirements of the indoor unit



### INFORMATION


The sound pressure level is less than 70 dBA.



### WARNING

If appliances contain R32 refrigerant, then the floor area of the room in which the appliances are installed, operated and stored must be larger than the minimum floor area A (m<sup>2</sup>), for units CVXM, FVXM refer to the "To determine the minimum floor area" [▶ 5], for FVXTM-B refer to General safety precautions.

- **Spacing.** Mind the following requirements:

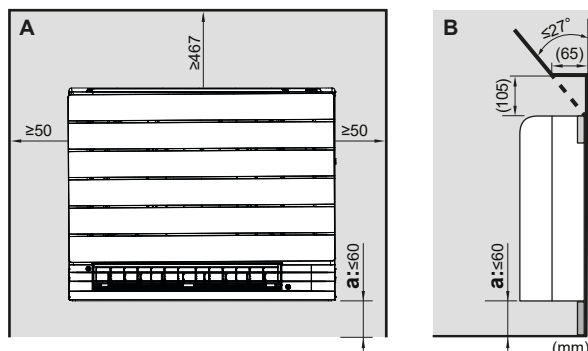

A Front view  
B Side view

- a If the refrigerant charge is  $\geq 1.843$  kg, install unit  $\leq 60$  mm above the floor.

- **Wall insulation.** When conditions in the wall exceed 30°C and a relative humidity of 80%, or when fresh air is inducted into the wall, then additional insulation is required (minimum 10 mm thickness, polyethylene foam).
- **Wall or floor strength.** Check whether the wall or the floor is strong enough to support the weight of the unit. If there is a risk, reinforce the wall or the floor before installing the unit.

### To determine the minimum floor area

- The system using R32 refrigerant is restricted with respect to the total refrigerant charge and/or the floor area that is served.
- To determine the total refrigerant charge (m) in the system see the Installation manual of the outdoor unit.


**Note:** It is not allowed to install an indoor unit in a room with area  $< A_{\min}$  (m<sup>2</sup>).

- Depending on the total refrigerant charge (m), the minimum floor area is ( $A_{\min}$ ).




### INFORMATION

- The total refrigerant charge (m), the minimum floor area is ( $A_{\min}$ ) limitation depends also on room height (H) and if the unit is installed in the **LOWEST UNDERGROUND FLOOR** or in any **OTHER FLOORS**.
- If the required exact value for the total refrigerant charge in the system (m) is not listed below, use the closest higher value.
- If the height of the room is  $> 2.2$  m use values for 2.2 m.
- For FVXTM-B use the graph in the General safety precautions.

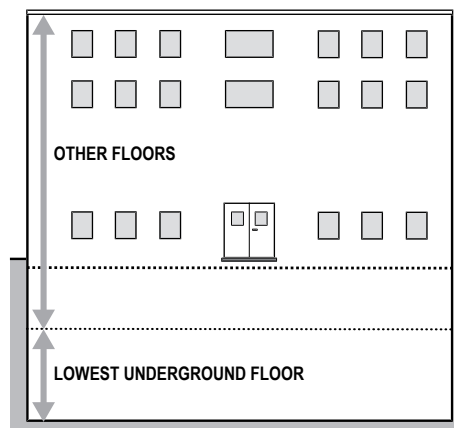

### Any of OTHER FLOORS

m (kg)	$A_{\min}$ (m <sup>2</sup> )		
	H $\geq 2.2$ m	H = 2.0 m	H = 1.8 m
$\leq 1.842$	No limitations		
1.843	3.64	4.00	4.45
1.9	3.75	4.13	4.58
2.0	3.95	4.34	4.83
2.1	4.15	4.56	5.07
2.2	4.34	4.78	5.31
2.3	4.54	4.99	5.55
2.4	4.74	5.21	5.79
2.5	4.94	5.43	6.03
2.6	5.13	5.65	6.27
2.7	5.33	5.86	6.51
2.8	5.53	6.08	6.76
2.9	5.73	6.30	7.00
3.0	5.92	6.51	7.24
3.1	6.12	6.73	7.48
3.2	6.32	6.95	7.72
3.3	6.51	7.17	7.96

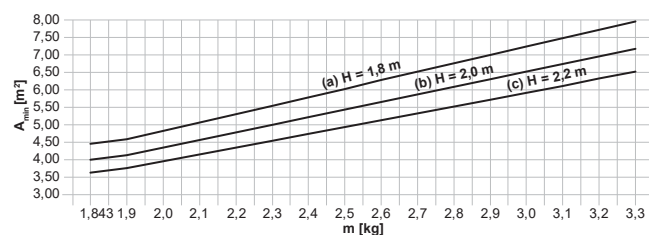


$A_{\min}$  Minimum floor area  
m Total refrigerant charge in the system  
H Height of the room

# 5 Unit installation

## The LOWEST UNDERGROUND LEVEL

m (kg)	A <sub>min</sub> (m <sup>2</sup> )		
	H≥2.2 m	H=2.0 m	H=1.8 m
≤1.842	No limitations		
1.843	5.46	6.00	6.67
1.9	5.63	6.19	6.88
2.0	5.92	6.51	7.24
2.1	6.22	6.84	7.60
2.2	6.51	7.17	7.96
2.3	6.81	7.49	8.32
2.4	7.11	7.82	8.69
2.5	7.40	8.14	9.05
2.6	7.70	8.47	9.41
2.7	8.00	8.79	9.77
2.8	8.29	9.12	10.13
2.9	8.59	9.45	10.50
3.0	8.88	9.77	10.86
3.1	9.18	10.10	11.22
3.2	9.48	10.42	11.58
3.3	9.77	10.75	11.94

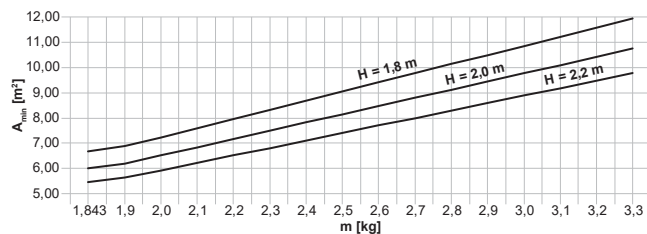

A<sub>min</sub> Minimum floor area  
 m Total refrigerant charge in the system  
 H Ceiling height of the room

**Example:** If the indoor unit is installed in room with ceiling height 2 m, located above ground level and the total refrigerant charge of the connected system is 2.3 kg, than minimum floor area is 4.99 m<sup>2</sup>.


**Example:** If the indoor unit is installed in room with floor area 4.99 m<sup>2</sup>, ceiling height 2 m, located above ground level, you can install only system with refrigerant charge ≤2.3 kg.

## 5.2 Mounting the indoor unit

### 5.2.1 To install the indoor unit


#### Installation options

There are 3 possible type of installation for the indoor unit.

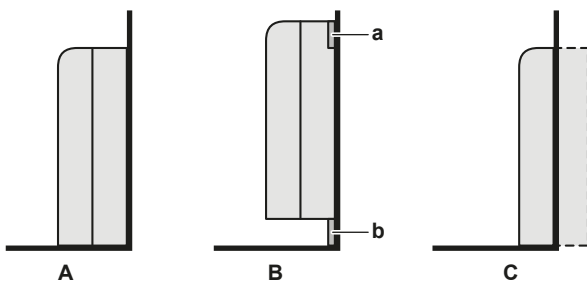

A Floor (exposed) installation  
 B Wall (exposed) installation  
 C Half concealed installation  
 a Mounting plate  
 b Skirting board


### Floor-standing installation

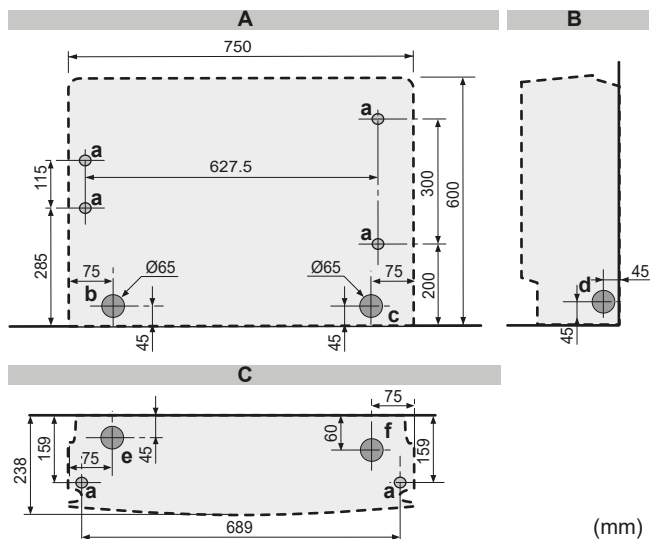

5-1 Indoor unit installation drawing: Floor-standing installation


- A Front view
- B Side view
- C Top view
- a Screw hole 6×
- b Left-back piping hole location
- c Right-back piping hole location
- d Left/right piping hole location
- e Left-bottom piping hole location
- f Right-bottom piping hole location

- 1 Drill a wall hole, depending on which side piping is taken out. See "5.2.2 To drill a wall hole" [p. 8].
- 2 Open the front panel and remove the front grille.
- 3 Remove the slit portions using nippers. See "5.2.3 To remove the slit portions" [p. 8].
- 4 Secure the unit to the wall and floor using 6 screws M4×25L (field supply).

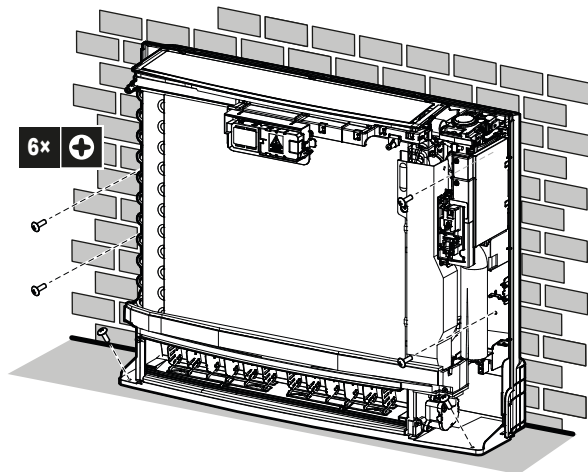

- 5 When the complete installation is finished, attach the front panel and the front grille in their original position.


## Wall-mounted installation

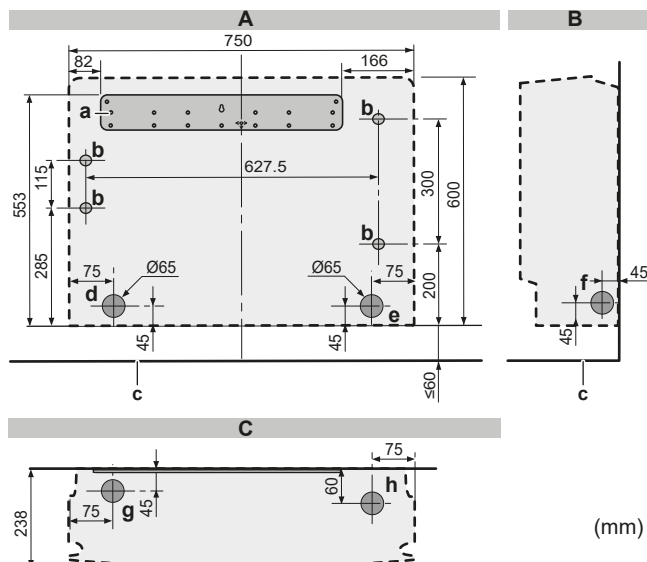


5-2 Indoor unit installation drawing: Wall-mounted installation

- A Front view
- B Side view
- C Top view
- a Mounting plate
- b Screw hole 4×
- c Floor
- d Left-back piping hole location
- e Right-back piping hole location
- f Left/right piping hole location
- g Left-bottom piping hole location
- h Right-bottom piping hole location

- 6 Temporarily secure the mounting plate on the wall.
- 7 Make sure the mounting plate is level.
- 8 Mark the centres of the drilling points on the wall.
- 9 Secure the mounting plate on the wall using 5 screws M4×25L (field supply).

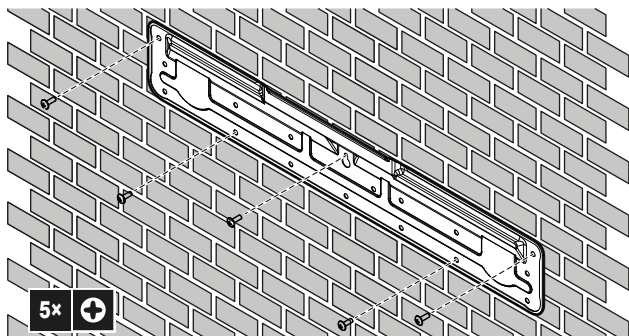


- 10 Drill a wall hole, depending on which side piping is taken out. See "5.2.2 To drill a wall hole" [p. 8].
- 11 Open the front panel and remove the front grille.
- 12 Remove the slit portions using nippers. See "5.2.3 To remove the slit portions" [p. 8].
- 13 If necessary for the skirting board, remove the slit portion on the bottom frame.

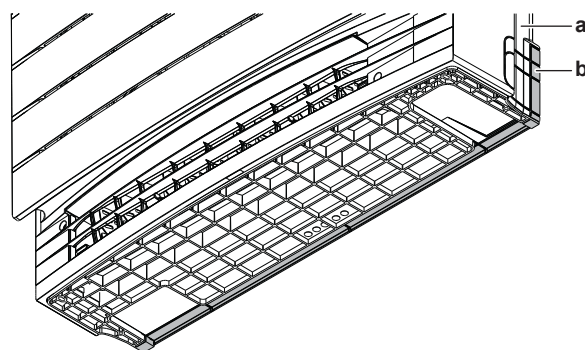

- a Bottom frame
- b Slit portion

14 Align the unit using the alignment symbol on the mounting plate: 375 mm from the alignment symbol to the each side (unit width 750 mm), 487 mm from the alignment symbol to the bottom of the unit.

15 Hook the unit on the mounting plate and secure the unit to the wall using 4 screws M4×25L (field supply).

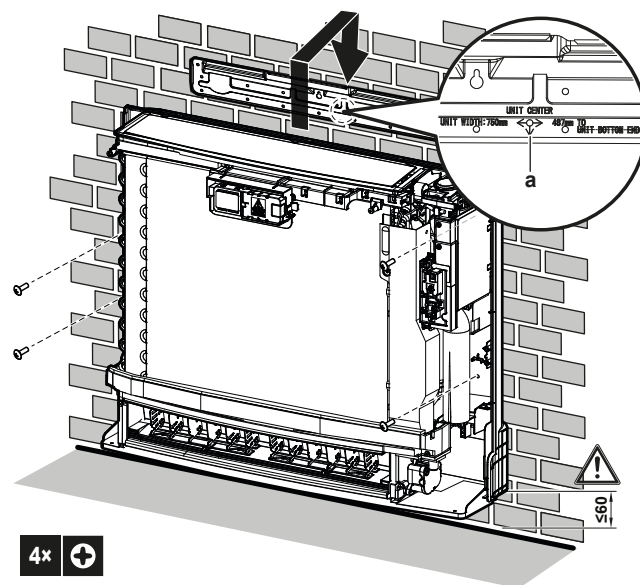


- a Alignment symbol

16 When the complete installation is finished, attach the front panel and the front grille in their original position.

## 5 Unit installation


### Half-concealed installation

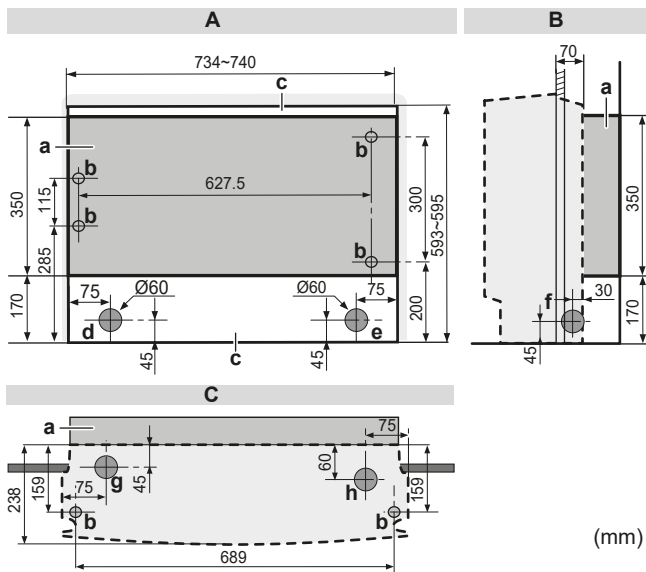

5-3 Indoor unit installation drawing: Half-concealed installation

- A Front view
- B Side view
- C Top view
- a Extra filler board
- b Screw hole 6×
- c Hole
- d Left-back piping hole location
- e Right-back piping hole location
- f Right/left piping hole location
- g Left-bottom piping hole location
- h Right-bottom piping hole location

- 17 Make a hole in the wall as illustrated above.
- 18 Install the extra filler board (field supply) in accordance with the space between the unit and the wall. Make sure there is no gap between the unit and the wall.
- 19 Drill a wall hole, depending on which side piping is taken out. See "5.2.2 To drill a wall hole" [▶ 8].
- 20 Remove the slit portions using nippers. See "5.2.3 To remove the slit portions" [▶ 8].
- 21 Open the front panel, remove the front grille, remove the top and side casings.
- 22 Secure the unit to the extra filler board and to the floor using 6 screws M4×25L (field supply).

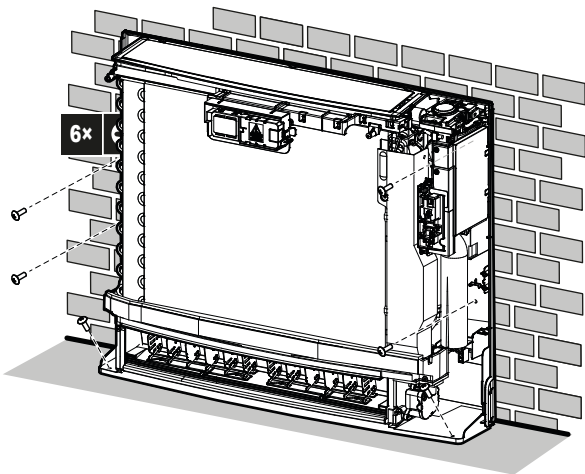

- 23 When the complete installation is finished, attach the front panel and the front grille in their original position.

### 5.2.2 To drill a wall hole



#### CAUTION


For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.



#### NOTICE

Be sure to seal the gaps around the pipes with sealing material (field supply), in order to prevent water leakage.

- 1 Bore a 65 mm large feed-through hole in the wall with a downward slope towards the outside.
- 2 Insert a wall embedded pipe into the hole.
- 3 Insert a wall cover into the wall pipe.

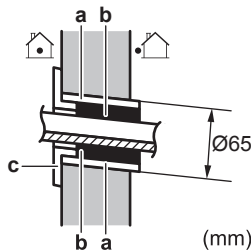


- a Wall embedded pipe
- b Putty
- c Wall hole cover

- 4 After completing wiring, refrigerant piping and drain piping, do NOT forget to seal the gap with putty.


### 5.2.3 To remove the slit portions

For side piping (left/right) and bottom piping (left/right) slit portions must be removed. Remove slit portions according to where the piping is taken out.

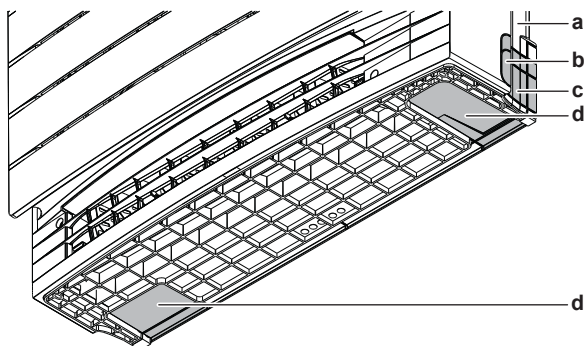


- a Bottom frame
- b Slit portion for side piping on the front grille (same on the other side)
- c Slit portion for side piping on the bottom frame (same of the other side)
- d Slit portion for the bottom piping

- 1 Cut off the slit portion using nippers.

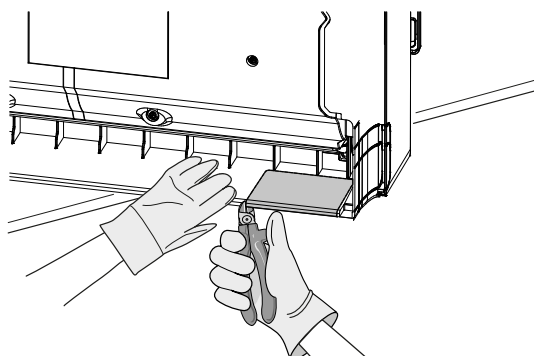



- Remove any burrs along the cut section using a half round needle file.

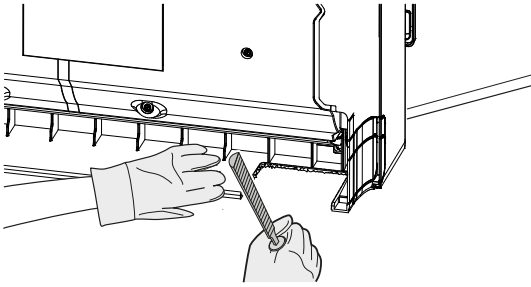

## 5.3 Connecting the drain piping


### 5.3.1 General guidelines

- Pipe length.** Keep drain piping as short as possible.
- Pipe size.** Use rigid polyvinyl chloride pipe with 20 mm nominal diameter and 26 mm outer diameter.



#### NOTICE

- Install the drain hose with a downward slope.
- Traps are NOT permitted.
- Do NOT put the end of the hose in water.

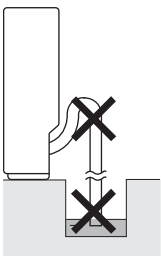

- Drain hose.** Drain hose (accessory) is 220 mm long and with 18 mm outer diameter on the connecting side.
- Extension hose.** Use rigid polyvinyl chloride pipe (field supply) with 20 mm nominal diameter as extension hose. When connecting an extension hose, use a polyvinyl adhesive agent for glueing.
- Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.


### 5.3.2 To connect the drain piping to the indoor unit



#### NOTICE


Incorrect connection of the drain hose might cause leaks, and damage the installation space and surroundings.

- Push the drain hose (accessory) as far as possible over the drain socket and fix it with 1 screw (accessory).

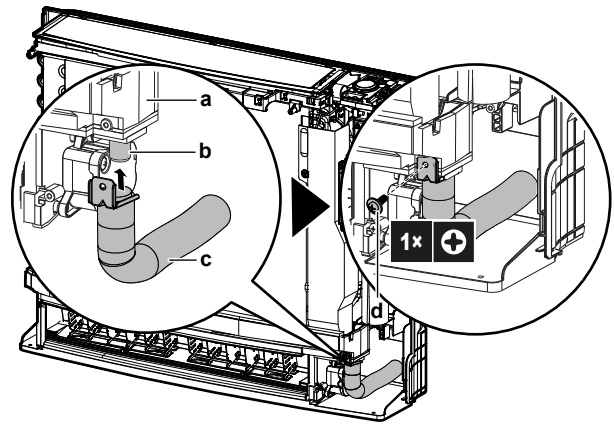

- a Drain pan
- b Drain socket
- c Drain hose (accessory)
- d Screw (accessory)


- Check for water leaks (see "5.3.3 To check for water leaks" [9]).
- Insulate the indoor drain socket and drain hose with  $\geq 10$  mm insulation material to prevent condensation.
- Connect the drain piping to the drain hose. Insert the drain hose  $\geq 50$  mm, so it will not be pulled out of the drain pipe.

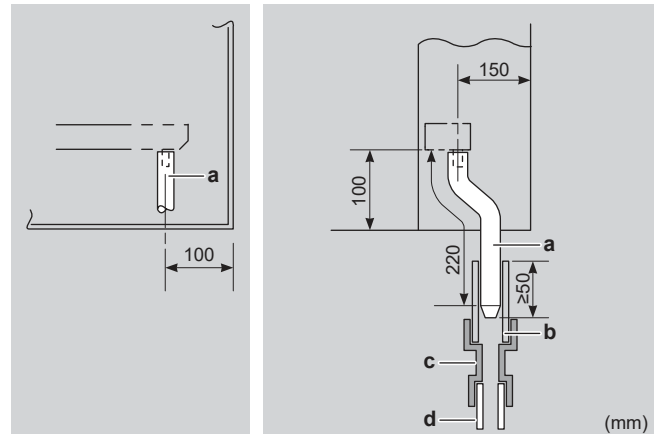

- a Drain hose (accessory)
- b Vinyl chloride drain pipe (VP-30) (field supply)
- c Reducer (field supply)
- d Vinyl chloride drain pipe (VP-20) (field supply)

### 5.3.3 To check for water leaks

- Remove the air filters.
- Gradually pour approximately 1 l of water in the drain pan, and check for water leaks.

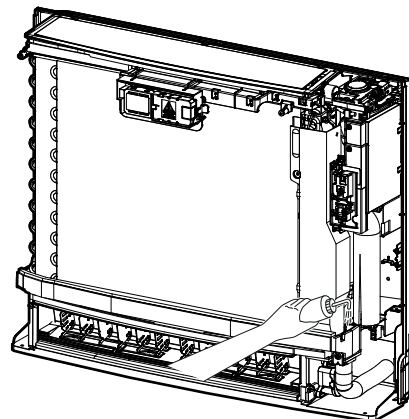

## 6 Piping installation

### 6 Piping installation

#### 6.1 Preparing refrigerant piping

##### 6.1.1 Refrigerant piping requirements



#### CAUTION

Piping **MUST** be installed according to instructions given in "6 Piping installation" [▶ 10]. Only mechanical joints (e.g. braze+flare connections) that are compliant with the latest version of ISO14903 can be used.



#### CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



#### NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.

- Foreign materials inside pipes (including oils for fabrication) must be  $\leq 30$  mg/10 m.

#### Refrigerant piping diameter

Use the same diameters as the connections on the outdoor units:

Class	Pipe outer diameter (mm)	
	Liquid piping	Gas piping
20~35	Ø6.4	Ø9.5
50	Ø6.4	Ø12.7

#### Refrigerant piping material

##### Piping material

Phosphoric acid deoxidised seamless copper

##### Flare connections

Only use annealed material.

##### Piping temper grade and thickness

Outer diameter (Ø)	Temper grade	Thickness (t) <sup>(a)</sup>	
6.4 mm (1/4")	Annealed (O)	$\geq 0.8$ mm	
9.5 mm (3/8")			
12.7 mm (1/2")			

<sup>(a)</sup> Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

##### 6.1.2 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
  - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
  - with a heat resistance of at least 120°C
- Insulation thickness:

Pipe outer diameter (Ø <sub>o</sub> )	Insulation inner diameter (Ø <sub>i</sub> )	Insulation thickness (t)
6.4 mm (1/4")	8~10 mm	$\geq 10$ mm
9.5 mm (3/8")	10~14 mm	$\geq 13$ mm
12.7 mm (1/2")	14~16 mm	$\geq 13$ mm



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

#### 6.2 Connecting the refrigerant piping



#### DANGER: RISK OF BURNING/SCALDING

##### 6.2.1 To connect the refrigerant piping to the indoor unit

 


#### A2L WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.

- Pipe length.** Keep refrigerant piping as short as possible.

- Connect refrigerant piping to the unit using **flare connections**.
- Insulate** the refrigerant piping on the indoor unit as follows:




- a Gas pipe
- b Gas pipe insulation
- c Liquid pipe
- d Liquid pipe insulation



#### NOTICE

Make sure to insulate all refrigerant piping. Any exposed piping might cause condensation.

- Close the slit on the refrigerant pipe connection and secure it with a tape (field supply). Make sure there are no gaps.
- Wrap the slit and the end of the insulation of the connected refrigerant piping with insulation piece (accessory). Make sure there are no gaps.

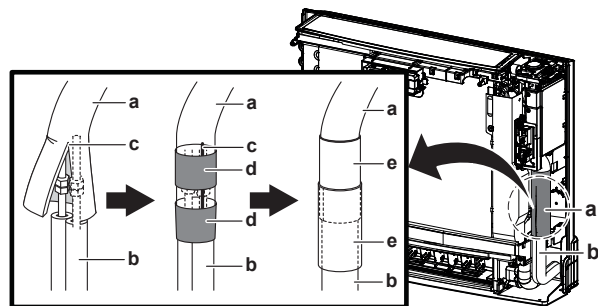

- a Refrigerant pipe connection
- b Refrigerant piping (field supply)
- c Slit
- d Tape
- e Insulation piece (accessory)

- Check refrigerant piping joints for leaks after charging refrigerant.



#### CAUTION

Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0,25 times the maximum allowable pressure. No leak shall be detected.

## 7 Electrical installation



**DANGER: RISK OF ELECTROCUTION**



**WARNING**

ALWAYS use multicore cable for power supply cables.



**WARNING**

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



**WARNING**

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



**WARNING**

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.



**WARNING**

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



**WARNING**

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

### 7.1 Specifications of standard wiring components



**NOTICE**

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal. Details are described in "Guidelines when connecting the electrical wiring" in the installer reference guide.


Component		
Interconnection cable (indoor↔outdoor)	Voltage	220~240 V
	Wire size	Only use harmonized wire providing double insulation and suitable for applicable voltage  4-core cable  1.5 mm <sup>2</sup> ~2.5 mm <sup>2</sup> (based on outdoor unit)

### 7.2 To connect the electrical wiring to the indoor unit

Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice.


- 1 Open the terminal block.
- 2 Strip the wire ends approximately 15 mm.
- 3 Match wire colours with terminal numbers on indoor and outdoor unit's terminal blocks and firmly screw wires to the corresponding terminals.

- 4 Connect the earth wires to the corresponding terminals.

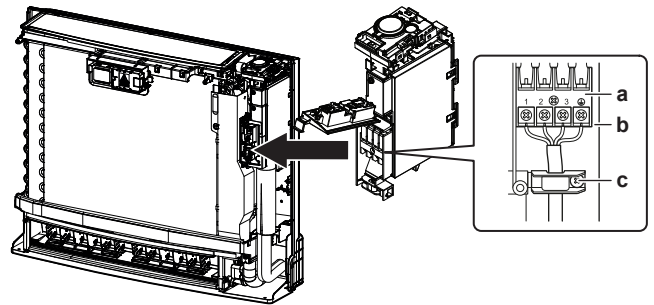


- a Terminal block
- b Electrical component block
- c Cable clamp

- 5 Pull the wires to make sure that they are securely attached, then retain the wires with the cable clamp.
- 6 Make sure that the wires do not come in contact with the metal parts of the heat exchanger.
- 7 In case of connecting to an optional adapter, see "7.3 To connect optional accessories (wired user interface, central user interface, wireless adapter, etc.)" [ 11].

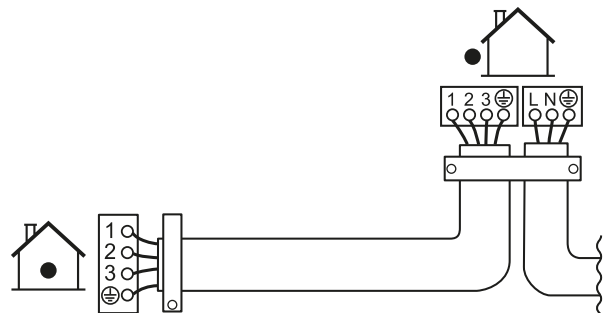

### 7.3 To connect optional accessories (wired user interface, central user interface, wireless adapter, etc.)

- 1 Remove the electrical wiring box cover.
- 2 Connect the optional adapter wire to the S21 connector. To connect the optional adapter wire to the option, refer to the installation manual of the optional adapter.
- 3 Lead the wire as shown in the figure below.

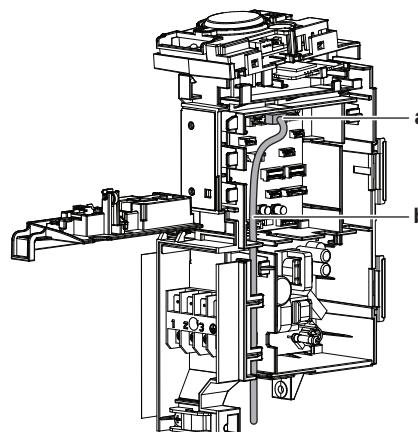

- a S21 connector
- b Optional adapter wire


- 4 Close the electrical wiring box cover.

## 8 Finishing the indoor unit installation

### 8 Finishing the indoor unit installation

#### 8.1 To finish the indoor unit installation

- After the drain piping, refrigerant piping and the electrical wiring are finished. Wrap the refrigerant pipes and the interconnection cable with insulation tape. Overlap at least half the width of the tape with each turn.

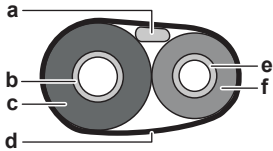

- a Interconnection cable
- b Gas pipe
- c Gas pipe insulation
- d Insulation tape
- e Liquid pipe
- f Liquid pipe insulation

- Pass the pipes through the wall hole and seal the gaps with putty.

## 9 Configuration



#### INFORMATION

In case 2 indoor units are installed in 1 room, set different addresses for 2 user interfaces. For procedure refer to the installer reference guide, for location see "1.1 About this document" [p. 2].

## 10 Commissioning



#### NOTICE

**General commissioning checklist.** Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during commissioning and hand-over to the user.



#### NOTICE

ALWAYS operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.

### 10.1 To perform a test run

**Prerequisite:** Power supply MUST be in the specified range.

**Prerequisite:** Test run may be performed in cooling or heating mode.

**Prerequisite:** Test run should be performed in accordance with the operation manual of the indoor unit to make sure that all functions and parts are working properly.

- In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. Test run can be disabled if necessary.
- When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.

- The system stops operating 3 minutes after the unit is turned OFF.

#### 10.1.1 To perform a test run using the wireless remote control

- Press to switch the system on.
- Press the middle of and simultaneously.
- Press twice to choose and confirm selection by pressing .

**Result:** on the display indicates that the test run is selected. Test run operation will stop automatically after about 30 minutes.

- To stop operation sooner, press the ON/OFF button.

## 11 Disposal



#### NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts MUST comply with applicable legislation. Units MUST be treated at a specialised treatment facility for reuse, recycling and recovery.

## 12 Technical data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

 
 





### 12.1 Wiring diagram

Translation of wiring the diagram notes	
On wiring diagram	Translation
Caution: When the main power is turned OFF and then back on again, operation will resume automatically.	Caution: When the main power is turned OFF and then back on again, operation will resume automatically.
Notice: (*) Applicable for units with refrigerant leakage sensor only.	Notice: (*) Applicable for units with refrigerant leakage sensor only.

#### 12.1.1 Unified wiring diagram legend

For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by "\*" in the part code.

Symbol	Meaning	Symbol	Meaning
	Circuit breaker		Protective earth
			Noiseless earth
			Protective earth (screw)
	Connection		Rectifier
	Connector		Relay connector
	Earth		Short-circuit connector
	Field wiring		Terminal

Symbol	Meaning	Symbol	Meaning
	Fuse		Terminal strip
	Indoor unit		Wire clamp
	Outdoor unit		Heater
	Residual current device		

Symbol	Colour	Symbol	Colour
BLK	Black	ORG	Orange
BLU	Blue	PNK	Pink
BRN	Brown	PRP, PPL	Purple
GRN	Green	RED	Red
GRY	Grey	WHT	White
SKY BLU	Sky blue	YLW	Yellow

Symbol	Meaning
A*P	Printed circuit board
BS*	Pushbutton ON/OFF, operation switch
BZ, H*O	Buzzer
C*	Capacitor
AC*, CN*, E*, HA*, HE*, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_*, NE	Connection, connector
D*, V*D	Diode
DB*	Diode bridge
DS*	DIP switch
E*H	Heater
FU*, F*U, (for characteristics, refer to PCB inside your unit)	Fuse
FG*	Connector (frame ground)
H*	Harness
H*P, LED*, V*L	Pilot lamp, light emitting diode
HAP	Light emitting diode (service monitor green)
HIGH VOLTAGE	High voltage
IES	Intelligent eye sensor
IPM*	Intelligent power module
K*R, KCR, KFR, KHuR, K*M	Magnetic relay
L	Live
L*	Coil
L*R	Reactor
M*	Stepper motor
M*C	Compressor motor
M*F	Fan motor
M*P	Drain pump motor
M*S	Swing motor
MR*, MRCW*, MRM*, MRN*	Magnetic relay
N	Neutral
n=*, N=*	Number of passes through ferrite core
PAM	Pulse-amplitude modulation
PCB*	Printed circuit board
PM*	Power module
PS	Switching power supply
PTC*	PTC thermistor

Symbol	Meaning
Q*	Insulated gate bipolar transistor (IGBT)
Q*C	Circuit breaker
Q*DI, KLM	Earth leak circuit breaker
Q*L	Overload protector
Q*M	Thermo switch
Q*R	Residual current device
R*	Resistor
R*T	Thermistor
RC	Receiver
S*C	Limit switch
S*L	Float switch
S*NG	Refrigerant leak detector
S*NPH	Pressure sensor (high)
S*NPL	Pressure sensor (low)
S*PH, HPS*	Pressure switch (high)
S*PL	Pressure switch (low)
S*T	Thermostat
S*RH	Humidity sensor
S*W, SW*	Operation switch
SA*, F1S	Surge arrester
SR*, WLU	Signal receiver
SS*	Selector switch
SHEET METAL	Terminal strip fixed plate
T*R	Transformer
TC, TRC	Transmitter
V*, R*V	Varistor
V*R	Diode bridge, Insulated-gate bipolar transistor (IGBT) power module
WRC	Wireless remote controller
X*	Terminal
X*M	Terminal strip (block)
Y*E	Electronic expansion valve coil
Y*R, Y*S	Reversing solenoid valve coil
Z*C	Ferrite core
ZF, Z*F	Noise filter





ERC



**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**

U Nové Hospody 1155/1, 301 00 Plzeň Skvrňany, Czech Republic

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

Copyright 2024 Daikin

3P769578-3F 2024.09